

## Quick Start Guide

### XLM-78ST



#### Features:

- Analog VGA input
- STN Passive 7.8" color
- 640x480 resolution
- 80 nit
- Includes resistive touch screen and controller

---

### Contents of the XLM-78ST

1 XLM-78ST	MONITOR
1 "T" Stand	TILT STAND
1 CBL-22-122	SERIAL CABLE
1 CBL-22-238	VGA CABLE
1 PS-NP12-180523B	POWER SUPPLY
1 USERS MANUEL	V. 1.0

### Quick Installation Procedure (Do not install with out changing monitor settings first.)

1. Configure your computer display resolution to 640 x 480 , please follow the instructions below.  
A: To change the video settings in the Windows go to "Control Panel", select the DISPLAY icon.  
B: Click on "Settings" to adjust display resolution to 640 x 480.  
C: Then select "Advanced", click on the "Monitor" tab, select "Change" to set the monitor type to the "Standard VGA" in Windows.
2. Connect one end of the VGA cable to the VGA output connector of your computer and the other end to the back of XLM-78ST.
3. Connect one end of the DB9 serial cable to serial port COM1 or COM2 of your computer and the other end to the back of XLM-78ST.
4. Connect the 5VDC power supply supplied with the monitor.
5. Turn on computer.
6. The image should appear on the screen, trim contrast of LCD for optimum view.

#### Touch screen Driver installation as follows :

Install Touch screen drivers. Please down load the latest drivers from the Earthlcd web sight located on the tech support page. Select "EarthTouch" <http://www.earthlcd.com/tech.htm>

NOTE: please select "SC3" when the driver is installed. After the driver is installed go the "**Advanced**" Tab in "**SETTINGS**" and adjust your "**Sampling**" rate to 60 for optimum performance.

**CAUTION !!!** never use any other power supply than the 5VDC supply shipped with the monitor.